Aqua Rite operation

Controls

- Main switch



operational.	f late.	Normal operating mode. This switch will not function if the optional Jandy RS is operational.
--------------	---------	---

Super Chlorinate:	This electronically "super chlorinates" (shocks) the water for 24 hours as long as the filter pump is on. Move back to the "Auto" position when complete.
----------------------	---

Off:	Stops the electrolytic cell from producing
	chlorine.

Note: Turn off power at circuit breaker before servicing unit.

- Desired Output %

- Diagnostic push button (used for troubleshooting)



Push *Diagnostic* button for each display

Display will automatically default back to salinity if the button is not pushed for 30 seconds

Dia	agnostics menu	Typical values	Comments
▶ Defa	ault Salinity PPM (default display)	2700 - 3400	2600 at start up
1.	Water temp	50 - 104	Degrees F
2.	Cell voltage	22.0 - 25.0	30.0 - 33.0 in Off cycle
3.	Cell current	4.80 - 7.90	0.0 - 0.1 in Off cycle
4.	Desired Output %	0P - 100P	Rotate knob to adjust
5.	Instant salinity PPM (shows as negative)	2700 - 3400	See below to lock in value
6.	Product name (used with Jandy) (r1.10 +)	AL-0 - AL-2	See below to change names
7.	Software revision	r1.xx	xx refers to numeric revision

Lock in salt PPM

- Press *Diagnostic* button to display instant salt level
- Cycle *Main* switch

Auto > Super Chlorinate > Auto

Changing product name (r1.10 +)

- Press *Diagnostic* button to display product name
- Cycle *Main* switch

Auto > Super Chlorinate > Auto

- AL 0 > Agua Rite
- AL 1 > NatureSoft
- AL 2 > Min. Springs

Fahrenheit / Celsius (r1.10 +)

- Press *Diagnostic* button to display water temperature
- Cycle *Main* switch

Auto > Super Chlorinate > Auto

to switch between F and C

Operation

Visual indicators

- LCD display

Salt concentration is in parts per million



Power:
 Generating:
 Super Chlorinate:
 Super Chlorinate in process

AquaLink RS: Active communications with AquaLink RS



No flow : Flow problem generation stopped

Low Salt : Possible low salt condition

High salt: Cell current greater than 8 amps

Inspect cell: Check for calcium build up

Jandy operation

Jandy AquaLink RS interface

- Set Aqua Rite output level (0-100%) from in-house controller
- Initiate "Super Chlorinate" from in-house controller
- AquaLink operates Aqua Rite at 100% and turns pump on
- Number of hours for super chlorinate is programmable (1-99 hours)
- Spa cycle with override super chlorinate when spa is finished, super chlorinate will resume
- For troubleshooting the Agua Rite
- Place Jandy AquaLink RS in "service" or "timeout" mode
- AguaLink RS LED on Agua Rite will flash
- Aqua Rite front panel switch and output level dial will activate

In-house control

- Adjust the chlorine output setting (0 -- 100%)
 Press MENU
 Scroll to Aqua Rite® SETTING, press ENTER
 Scroll to desired output level, press ENTER
- Activate "super chlorinate" when needed Press MENU
 Scroll to Aqua Rite® SUPER CHLORINATE, press ENTER press ENTER again to start super chlorinate
- Program number for hours for super chlorinate
 Press MENU
 Scroll to PROGRAM, press ENTER
 Scroll to Aqua Rite® SUPER CHLORINATE HOURS, press ENTER
 Scroll to the desired number of hours (default is 24), press ENTER



Notes:

- Assure Aqua Rite is connected to line power
- Agua Rite® runs only when the filter pump is running
- Aqua Rite® turns off when valves set to "spa" (prevents overchlorination of spa)
- AquaLink® RS indicator shows Aqua Rite® is under remote control
- Aqua Rite® switch and output dial disabled during Super Chlorinate
- Jandy must have "I" rev. software and "HH" or "I" rev. PCB

AquaLink RS LED on Aqua Rite indicates control by Jandy Display Aqua Rite setting, product name and salt level